

For Mardome Trade/Ultra
on to Sloping Kerb
See Page 2 overleaf

Fixing Quantities


Length of Nominal Dome Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500	4
1800	5
2400	7

(All fixings supplied in packs of 5.)


Mardome Contents

Please unpack and check that all correct parts are included and undamaged.

All Mardome Trade

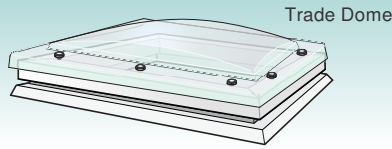


All Mardome Ultra

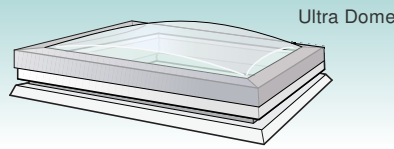


OR

 With either assembly, you will receive:
Kerb Fixings



With either assembly, you will receive:
Mardome Opening Unit Extras

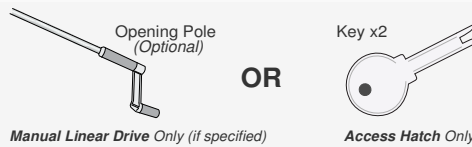


Mardome Opening Unit - Pre-Installation Information

Please select the relevant detail below for your product:


Installation Instructions

Manual Opening dome on to existing upstand

N.B. Kerb must be installed with hinges facing up-slope.

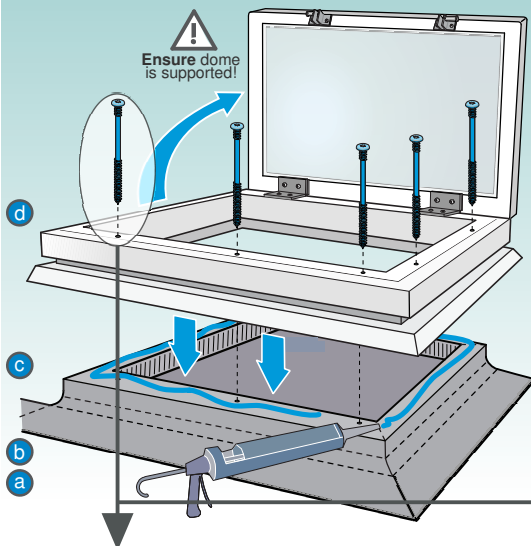


Access Hatch on to existing upstand

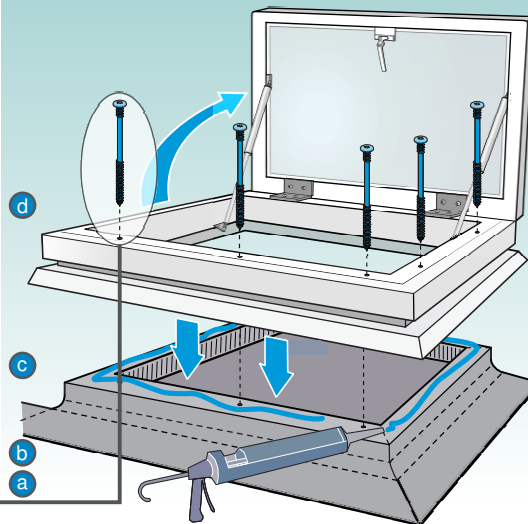

- !** Ensure dome is supported in open position to avoid damage!
- a** Install roof covering to cover existing upstand in accordance with manufacturer's installation recommendations.
 - !** **N.B.** It is important that there should be no excessive build up of layers, the top surface should be level and free from any protrusions or projections which may prevent adequate weather proofing.
- b** Carefully remove roof light from its packaging and ensure that hinged frame is unlocked and can be opened to 90°.
- c** Mastic/Silicone around the edge of the upstand opening and correctly place kerb, ensuring it is located squarely to the upstand with hinges facing up-slope.
- d** Fix kerb to the builders upstand using the 125mm kerb fastener.
- e** Ensure that the hinged dome is connected to the frame and locked into the closed position


Kerb Fixing

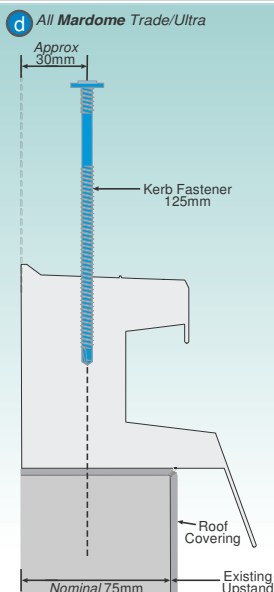


Mardome Installation

! Please note that all Health and Safety Regulations must be followed on site throughout the installation process.

e For Manual Linear Drive Connection

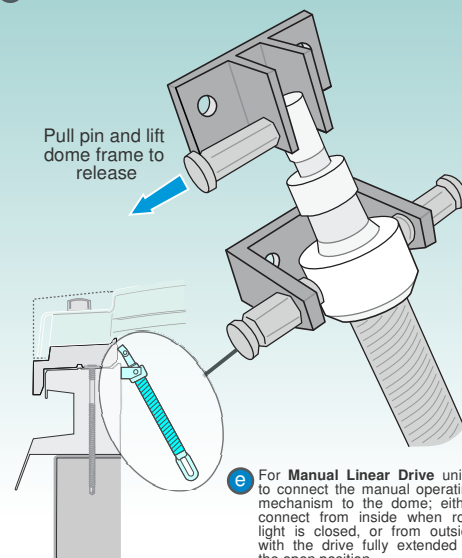

e For Access Hatch locking/unlocking

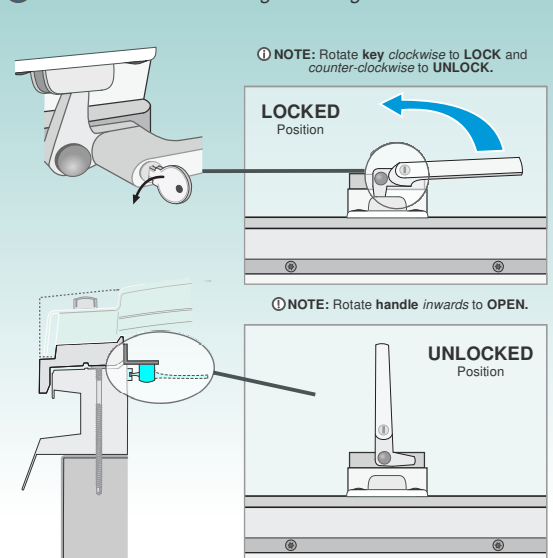

! TECHNICAL SUPPORT: For any technical information/queries please contact your supplier.

For Mardome Trade/Ultra on to Existing Upstand See **Page 1** overleaf

Fixing Quantities

Length of Nominal Dome Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500	4
1800	5
2400	7

(All fixings supplied in packs of 5.)

Mardome Contents


Please unpack and check that all correct parts are included and undamaged.

All Mardome Trade


Trade Dome

All Mardome Ultra

Ultra Dome

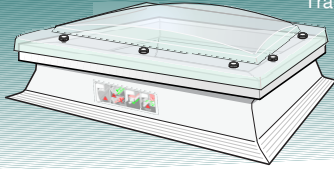


OR

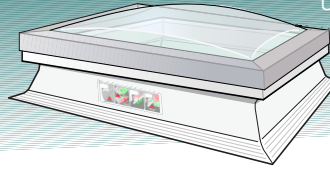


With either assembly, you will receive:
Kerb Fixings

 Kerb Fastener



 With either assembly, you will receive:
Mardome Opening Unit Extras



OR

Key x2



Manual Linear Drive Only (if specified)

Access Hatch Only


Mardome Installation

Please note that all Health and Safety Regulations must be followed on site throughout the installation process.


Installation Instructions

Manual Opening dome on to sloping kerb

N.B. Kerb must be installed with hinges facing up-slope.

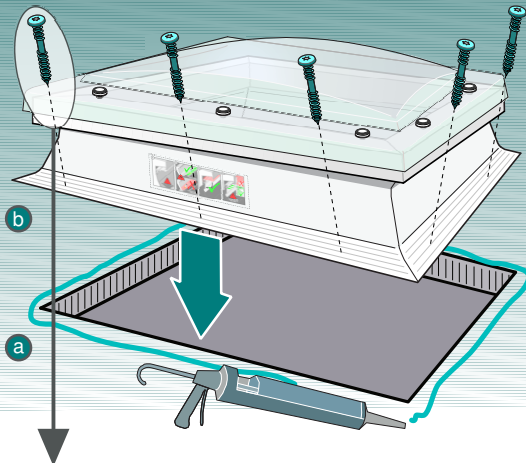


Roof Covering Installation

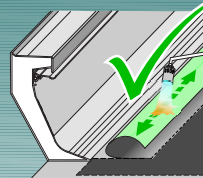

If required, lightly torch roof covering.




WARNING:
 Never apply direct heat or naked flame to the roof light!

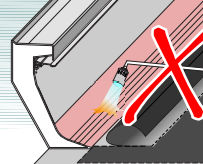

IMPORTANT: Membrane Clamp Locking



Push along line as shown to lock. **DO NOT** push on soft area!

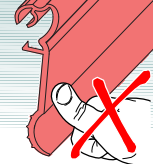

a Mastic/Silicone around the edge of the roof opening and correctly position dome, ensuring it is located squarely over the roof opening with hinges facing up-slope.

b Fix dome to the roof using the 55mm kerb fastener.

See above **Fixing Quantities** table for the correct quantity of fastenings required for the size of the dome.

N.B. Length of side refers to the nominal dome size (equivalent to inside base of kerb foot).

c Install roof covering up to lip, to stop under membrane clamp, ensuring it **does not** foul clamp. Install in accordance with manufacturer's installation recommendations.

d Lock the membrane clamp down fully, as shown.


e See e (below) for further information on opening mechanisms

Kerb Fixing


Mardome Opening Unit - Further Information

Please select the relevant detail below for your product:


b c All Mardome Trade & Ultra

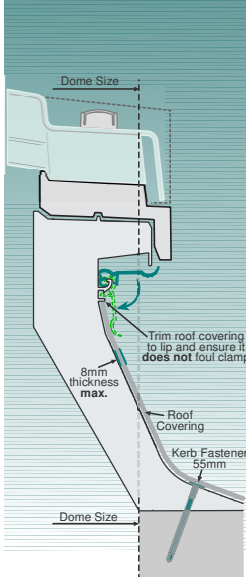

e For Manual Linear Drive Connection

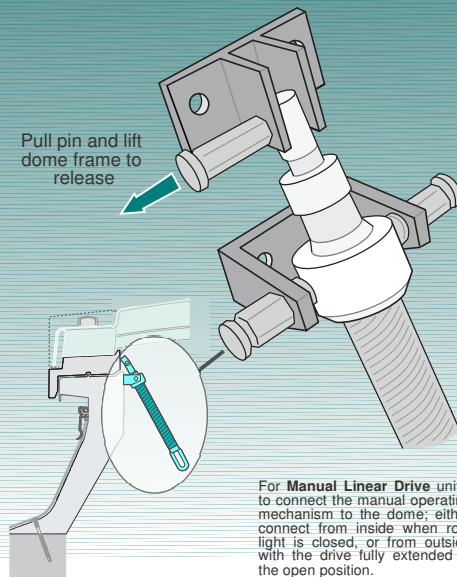

e For Access Hatch locking/unlocking

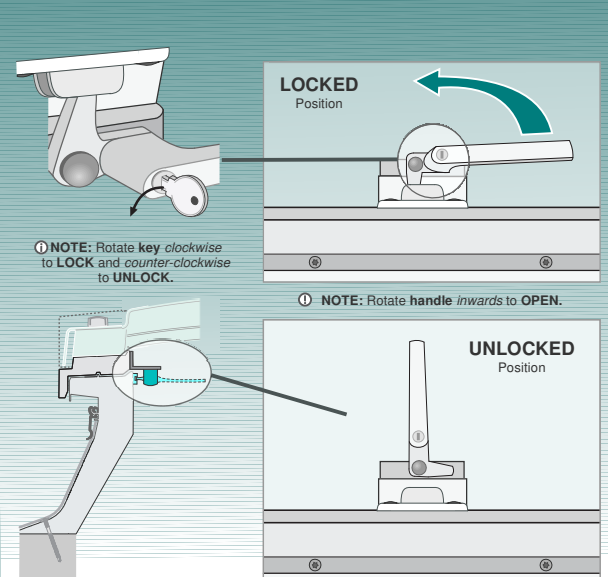

TECHNICAL SUPPORT: For any technical information/queries please contact your supplier.

Brett Martin Daylight Systems operates a policy of continuous product improvement, and reserves the right to alter specifications at any time without notice. Every effort has been taken to ensure all details contained in this document are correct at the time of going to press but this document should be used only as a guide and does not in any way form part of a contract or warranty. It is the customer's responsibility to ensure that the product is suitable for the actual conditions of use, which are beyond the control of Brett Martin Daylight Systems.