

For Mardome Trade/Ultra on to Sloping Kerb See **Page 2** overleaf

### Fixing Quantities

Length of Nominal Dome Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500	4
1800	5
2400	7

(All fixings supplied in packs of 5.)


### Installation Instructions

- ⚠** Ensure dome is supported in *open* position to avoid damage!
  - a** Install roof covering to cover existing upstand in accordance with manufacturer's installation recommendations.
  - b** Carefully remove roof light from it's packaging and ensure that hinged dome is unlocked from frame, as shown.
  - c** Mastic/Silicone around the edge of the upstand opening and correctly place kerb, ensuring it is located squarely to the upstand with hinges facing up-slope.
  - d** Fix kerb to the builders upstand using the 125mm kerb fastener.
- See above **Fixing Quantities** table for the correct quantity of fastenings required for the size of the dome.
- e** **Note:** actuator is supplied fitted to hinged dome, but disconnected from kerb.
- Fasten actuator to lower bracket as shown in diagram e, and ensure hinged dome is connected to frame and locked in the closed position.
- f** Arrange for electrical connections to be made by a suitably qualified electrician to wire product as shown below.

## Mardome Contents


**i** Please unpack and check that all correct parts are included and undamaged.

All Mardome Trade

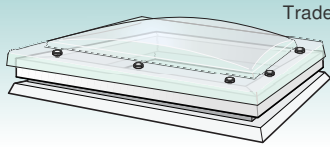

Trade Dome


All Mardome Ultra

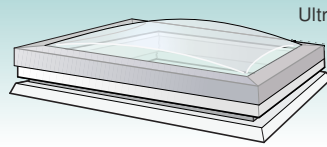

Ultra Dome

OR

 
With either assembly, you will receive:  
**Kerb Fixings**




## Mardome Installation

**⚠** Please note that all Health and Safety Regulations must be followed on site throughout the installation process.


### Powered SV30 Opening dome on existing upstand

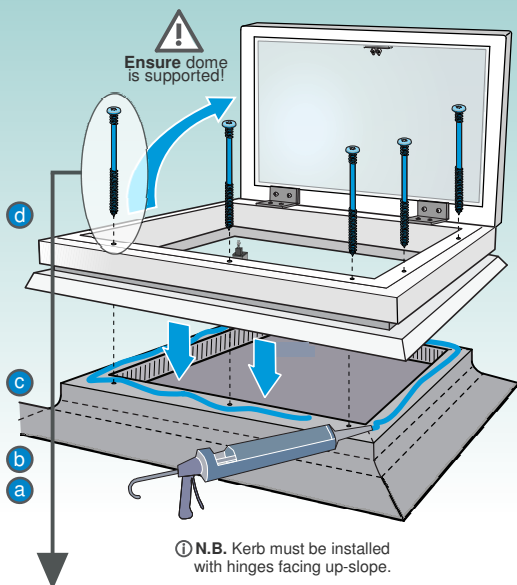

### e Dome connection to frame

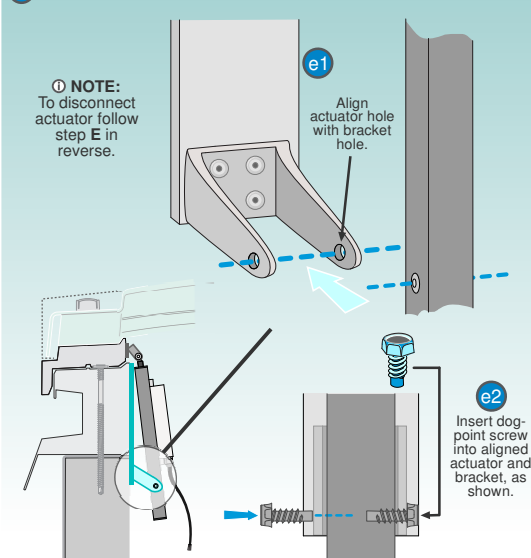


### Kerb Fixing

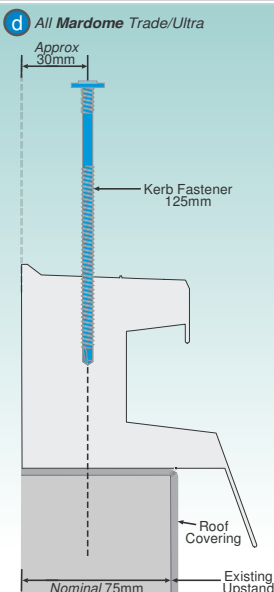

## Mardome Opening Unit - Further Information

### f Mardome SV30 Wiring Diagram

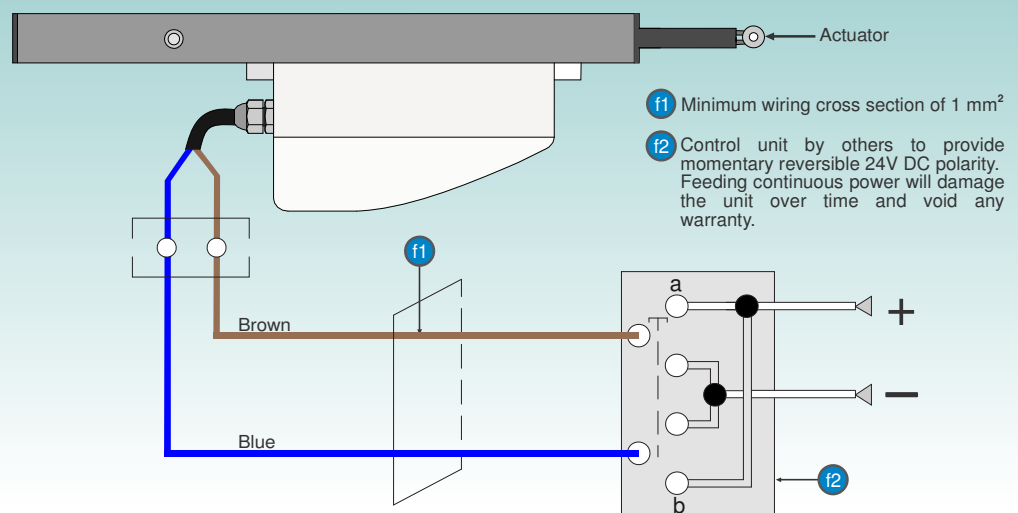

**Ⓜ TECHNICAL SUPPORT:** For any technical information/queries please contact your supplier.

For **Mardome Trade/Ultra**  
on to Existing Upstand  
See **Page 1** overleaf

### Fixing Quantities

Length of Nominal Dome Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500	4
1800	5
2400	7

(All fixings supplied in packs of 5.)


### Installation Instructions

- Mastic/Silicone around the edge of the roof opening and correctly position kerb, ensuring it is located squarely over the roof opening with hinges facing up-slope.
- Fix kerb to the roof using the 55mm kerb fastener.  
  
See above **Fixing Quantities** table for the correct quantity of fastenings required for the size of the dome.  
  
Ⓜ **N.B.** Length of side refers to the nominal dome size (equivalent to inside base of kerb foot).
- Install roof covering up to lip, to stop under membrane clamp, ensuring it **does not** foul clamp. Install in accordance with manufacturer's installation recommendations.
- Lock the membrane clamp down fully, as shown.
- Arrange for electrical connections to be made by a suitably qualified electrician to wire product as shown below.

## Mardome Contents


ⓘ Please unpack and check that all correct parts are included and undamaged.

All **Mardome Trade**

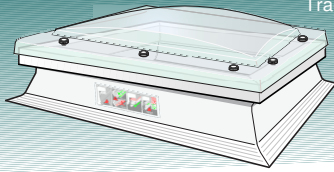

Trade Dome


All **Mardome Ultra**

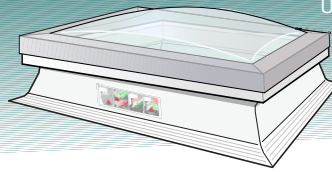

Ultra Dome

OR

 
With either assembly, you will receive:  
**Kerb Fixings**




## Mardome Installation

⚠ Please note that all *Health and Safety Regulations* must be followed on site throughout the installation process.


### Powered SV30 Opening dome on to sloping kerb

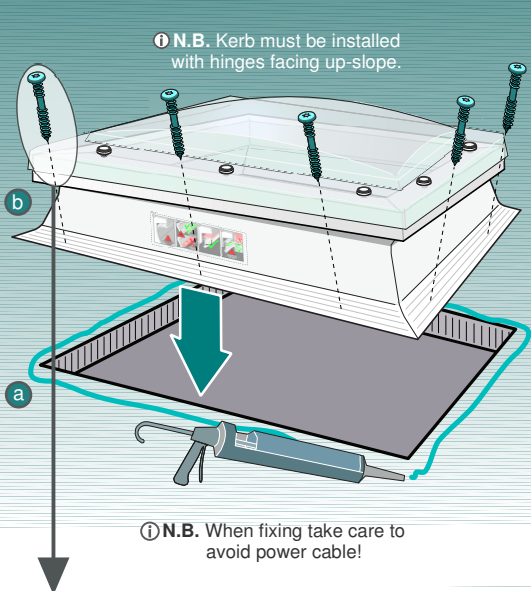

### c Roof Covering Installation

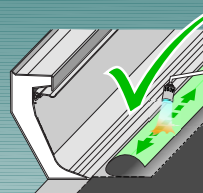


**WARNING:**  
Never apply direct heat or naked flame to the roof light!

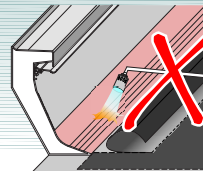


### d IMPORTANT: Membrane Clamp Locking



Push along line as shown to lock. **DO NOT** push on soft area!

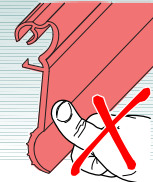


### Kerb Fixing

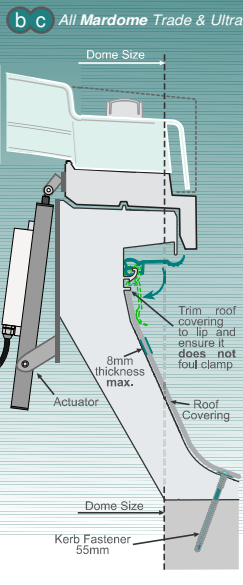

## Mardome Opening Unit - Further Information

### e Mardome SV30 Wiring Diagram

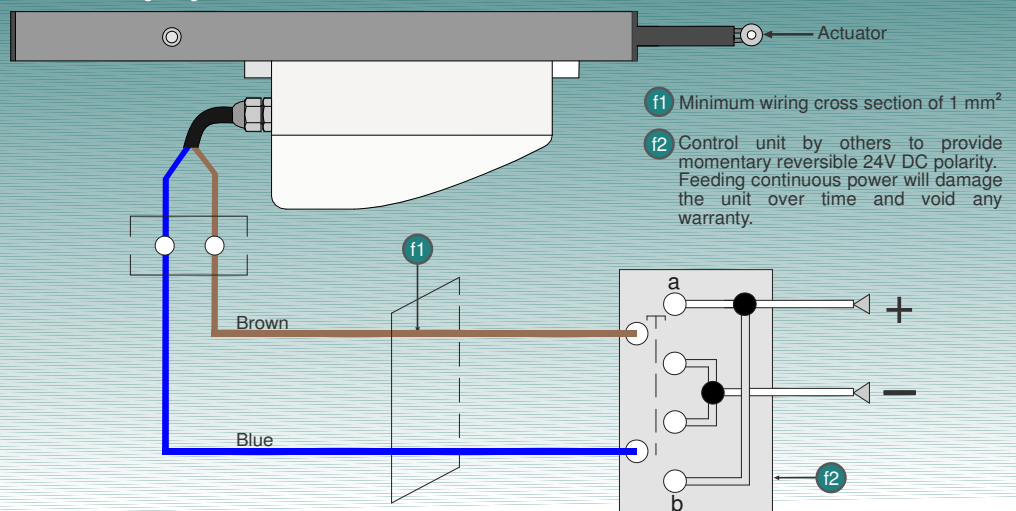

Ⓜ **TECHNICAL SUPPORT:** For any technical information/queries please contact your supplier.

Brett Martin Daylight Systems operates a policy of continuous product improvement, and reserves the right to alter specifications at any time without notice. Every effort has been taken to ensure all details contained in this document are correct at the time of going to press but this document should be used only as a guide and does not in any way form part of a contract or warranty. It is the customer's responsibility to ensure that the product is suitable for the actual conditions of use, which are beyond the control of Brett Martin Daylight Systems.